


GS Trailer Rear Cable Routing Diagram

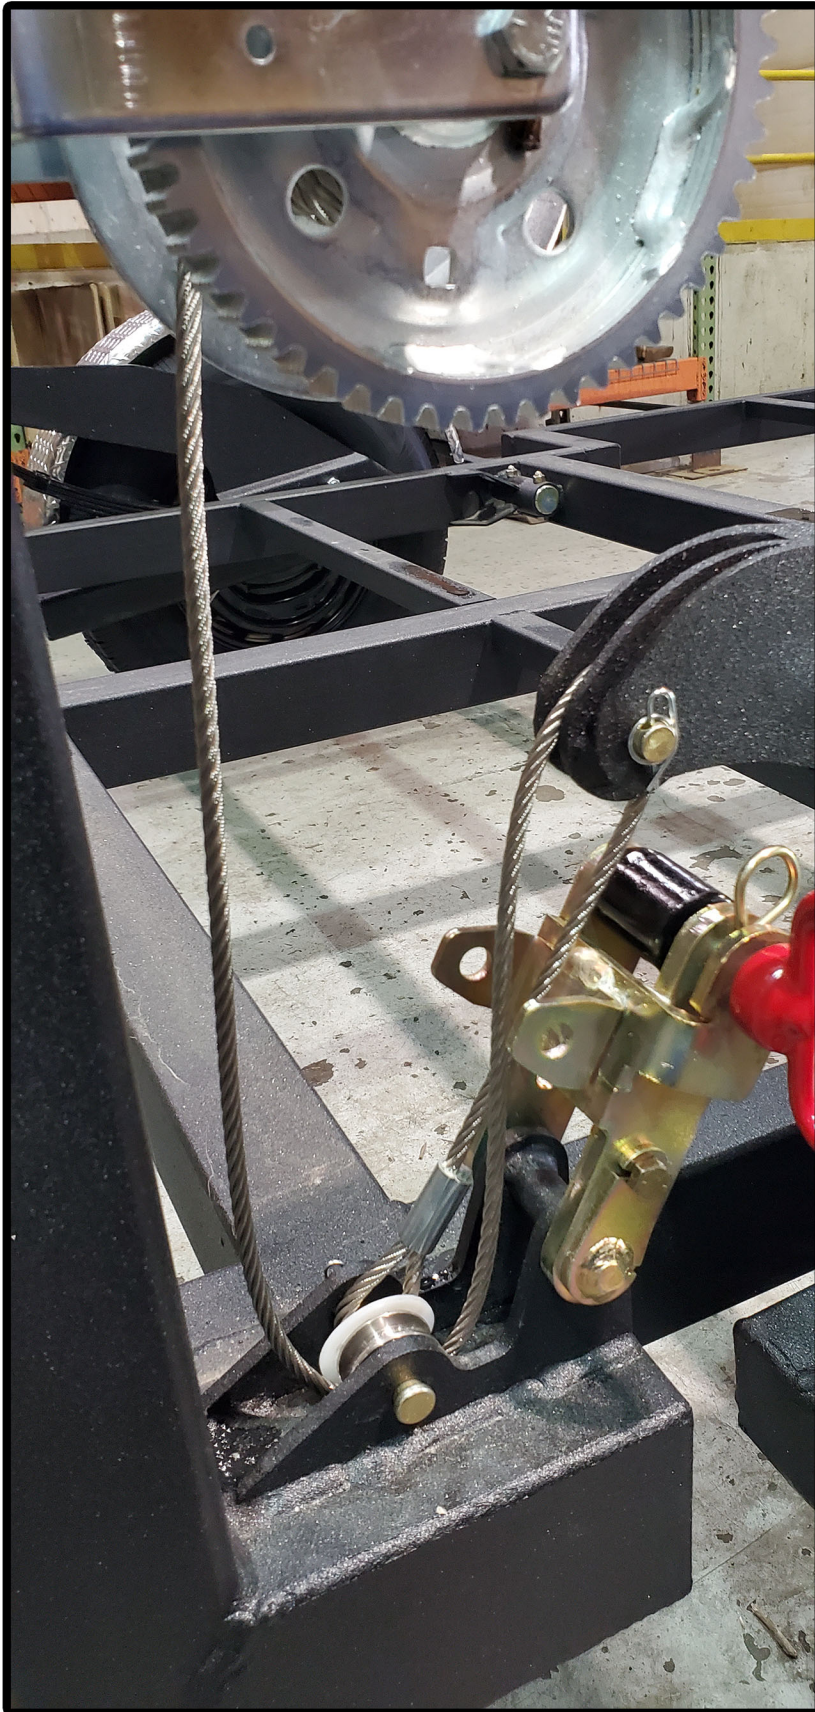

1. Remove pin clip on frame pulley. Pull pin out far enough to get looped end of cable on. Push pin back in and replace clip.

2. Thread cable up from the bottom of the torque arm.


3. Thread cable under the lower frame pulley.

4. Run the cable up to the winch. Using the supplied clip, attach the cable to the spool.



5. Wind the cable up on the spool.

GS Trailer Front Cable Routing Diagram

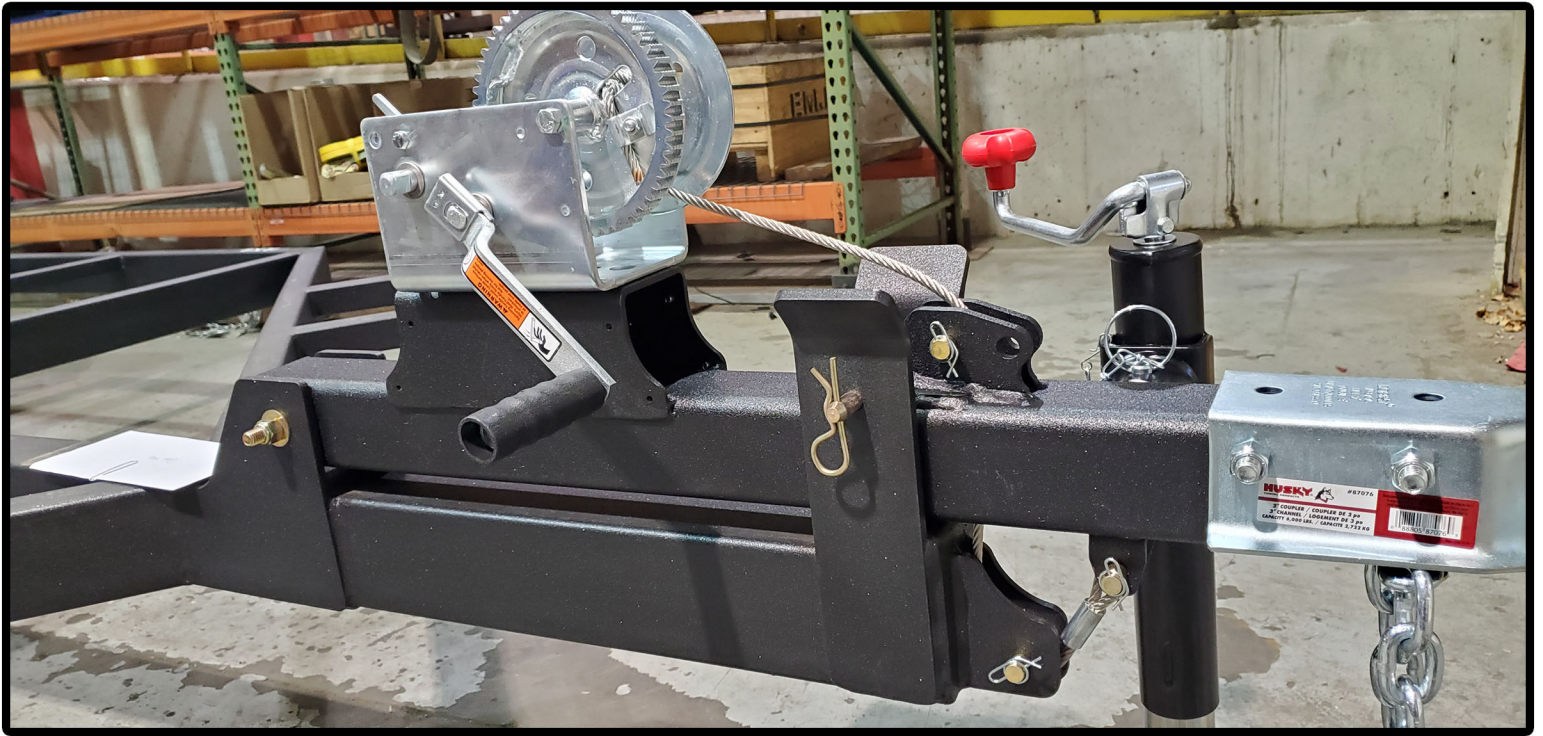

- 1. Remove pin clip on the bottom of the tongue. Insert the loop end of the cable and replace the pin and clip.**
- 2. Thread the cable under the front frame pulley and up thru the hitch.**
- 3. Thread cable over the top hitch pulley.**
- 4. Run the cable up to the bottom side of the winch spool. Using the supplied clip, attach the cable to the spool.**
- 5. Wind the cable up on the spool.**

